

ACTIVATE/DISACTIVATE THE VIDEO DOOR STATION CALL ON MY TELEPHONE

ACTIVATE BY

INDOOR TELEPHONE

OUTDOOR TELEPHONE

Pick-up the telephone
Dial : # * *

Dial installation phone N°
Wait for the message :
Door Call
Dial : # * *



DISACTIVATE BY

INDOOR TELEPHONE

OUTDOOR TELEPHONE

Pick-up the telephone
Dial : # * #

Dial installation phone N°
Wait for the message :
Door Call
Dial : # * #



ACTIVATE/DISACTIVATE TRANSFERT CALL

ACTIVATE BY

INDOOR TELEPHONE

OUTDOOR TELEPHONE

Pick-up the telephone
Dial : # * 1
Message:
Transfert activated

Dial installation phone N°
Wait for the message :
Door Call
Dial : # * 1
Transfert activated



DISACTIVATED BY

INDOOR TELEPHONE

OUTDOOR TELEPHONE

Pick-up the telephone
Dial : # * 0
Message:
Transfert disactivated

Dial installation phone N°
Wait for the message :
Door Call
Dial : # * 0
Transfet disactivated



HOW TO CHANGE A REGISTERED N° IN GHTLI

BY INDOOR TELEPHONE

Put GHTLI selector on position :
Local Prog

From indoor telephone Dial master code
***2001# (correct code)**
then **21**

After reception of Long Bip, enter the
digits corresponding to your call number
(maximum 16 digits)
then # to validate a number (< 16 digits)
Dial 00 to go out from the programming

Put GHTLI selector on position : ON

BY OUTDOOR TELEPHONE

Dial the installation phone number
and wait for the message :
Door Call

Dial the master code
***2001# (correct code)**
then **21**

After reception of Long Bip, enter the
digits corresponding to your call number
(maximum 16 digits)
then # to validate a number (< 16 digits)
Dial 00 to go out from the programming

