

Table View

Row
Previous
Next

[Display Settings]
[Move to Related Settings]
[Related Settings]

Enter Number Display

No.01
Event View Selection
SIF Functionality
Upload SIF File
Download SIF File

Number of Notes: 1
1. When configuring Contact Change SIF Event with the IXW-MA as a destination station, use below settings for SIF Settings.
- Program Type: 0100

#

Station Information					Function Settings								
Identification					SIF								
Number	Name	Location	Station Type	SIF Functionality	SIP URI Format	No.01						Transmission Trigg	
						SIF Settings							
						Program Type	IPv4	IPv6	Destination Port	SSL	Connection	Begin Outgoing Cal	
0001	0001	KONTOR	Hjemme	IX-MV7-*	Disable	Disable						<input type="checkbox"/>	
0002	0002	VÆRKSTED	Hjemme	IX-MV7-*	Disable	Disable						<input type="checkbox"/>	
0003	0003	VIDEO SNEDKER	Hjemme	IX-DV, IX-DVF(-*)	Enable	Disable	0100	192.168.1.166		65013	Disable	Socket	<input type="checkbox"/>
0004	0004	VIDEO KONTOR	Hjemme	IX-DV, IX-DVF(-*)	Enable	Disable	0100	192.168.1.166		65013	Disable	Socket	<input type="checkbox"/>
0005	0005	SNEDKER SUB	Hjemme	IX-RS-*	Disable	Disable						<input type="checkbox"/>	
0006	0006	GARAGE SUB	Hjemme	IX-RS-*	Disable	Disable						<input type="checkbox"/>	
0007	0007	I/O Adaptor		IXW-MA	Disable	Disable						<input type="checkbox"/>	

SIF

- Record
- Communication Audio Mess
- Chime
- CSR
- SSL Certificate
- IEEE 802.1X

Relæaktivering via IXW-MA enheden kræver en SIF opsætning hvor enheden der fungerer parallelt med IXW-MA enheden registreres som vist herover. Husk at sætte flueben i "Change Contact" boksen i "SIF Settings".

Table View [Move to Related Settings] Name

Row: [Display Settings] Relay Output 1 [Weekly Schedule] [Daily Schedule] Display Range 1 - 3

Station View Number of Notes: 5

1. Contact Change SIF Event is associated with Change Contact of Relay Output 1 from SIF Origination Station.
 2. When set to blank, it will perform in association with the contact change of Relay Output 1 on all SIF command originating stations.

#	Station Information					Option Input / Relay Output Settings						
	Identification					Relay Output						
	Number	Name	Location	Station Type	Latch Trigger Event 1	Relay Output 1		Relay Output 1 (Output Time is valid when Relay Output function is set to Door Release or is controlled by)		Output Time	Door Release Authorization	
				Comm Jrgent	Latch Reset Trigger Event	Contact Change SIF Event Number	Station List	Option Relay Control	Output Time Range	Output Time	Door Release Authorization	
0001	0001	KONTOR	Hjemme	IX-MV7-*	<input type="checkbox"/>			Disable	200-2000 [msec]	400	271474908	
0002	0002	VÆRKSTED	Hjemme	IX-MV7-*	<input type="checkbox"/>			Disable	200-2000 [msec]	400	382081367	
0003	0003	VIDEO SNEDKER	Hjemme	IX-DV, IX-DVF(-*)	<input type="checkbox"/>	Option Input		Disable	3-600 [sec]	10	806924221	
0004	0004	VIDEO KONTOR	Hjemme	IX-DV, IX-DVF(-*)	<input type="checkbox"/>	Option Input		Disable	3-600 [sec]	10	767453926	
0005	0005	SNEDKER SUB	Hjemme	IX-RS-*	<input type="checkbox"/>	Option Input		Disable	200-2000 [msec]	400	849611479	
0006	0006	GARAGE SUB	Hjemme	IX-RS-*	<input type="checkbox"/>	Option Input		Disable	200-2000 [msec]	400	523458518	
0007	0007	I/O Adaptor		IXW-MA	<input type="checkbox"/>		<input type="button" value="Open"/>	Disable	200-2000 [msec]	400		

Relæaktiveringstiden stilles direkte på enhedens Relæ Udgang der skal fungere parallelt med IXW-MA enhedens relæ udgang 1-10

Relæaktiveringstiden på relæudgangen i IXW-MA skal ikke stilles! Aktiveres parallelt med dørstationens opsætning