

■ SPECIFICATIONS

= 5. E511 16/(110/(6						
Power source	24V DC, Supplied from a power supply					
Power consumption	340mA (ma	340mA (max.)				
Video monitor	7″ TFT co	7" TFT color LCD				
Pixels	1, 150, 000) pixels				
Type of communication	Open void	ce hands-free auto-voice	actuation			
	Handset:	Simultaneous Communicati	on			
Ambient temperature	0~40°C					
Video door station	4 unit					
Sub master station	7 unit					
Call extension	1 unit					
External sensor input	3 input ((N/O or N/C dry closure α	contact)			
External Sensor Input	Notificat	ion sound				
	Internal	memory: 20 pictures (6 s	shots/pictu	ıre)		
Picture memory	SD card:	D card: 1,000 pictures (40 shots/picture)				
		(Differs depending on th	ne SD card	used.)		
Protect picture Internal memory: 5 pictures						
Frotest proture	SD card:	100 pictures				
Door release contact	24V AC/DC	24V AC/DC, 0.5A (N/O dry closure contact)				
Option button output	24V AC/DC	C, 1A (N/O dry closure co	ontact)			
Call tone	8 selecti	ons				
Mounting	Surface w	vall mount				
Electrical box	3-gang bo	X				
Housing	Unit case: Fire-retardant ABS plastic					
Housing	Acrylic panel					
Weight	Approx. 790g					
Unit color Front case: Snow white (5Y9. 3/0.1 Munsell Approximation)						
DESCRIPTION	RIPTION FIG. NAME			UNIT	DATE	
MASTER STATION		SPECIFICATIONS		mm	6 October,	2014
MODEL NO.		FIG. NO. PAGE REVISION 59615-2-7 1 AIPHOR				
JP-4MED		1 14.110.	I AGE	11.21.01011		


■ SELECTING POWER SUPPLY METHOD

1. Supplying power directly to each unit from a single power supply

CAUTION :

Be sure to distribute the output of the power supply close to the power supply.




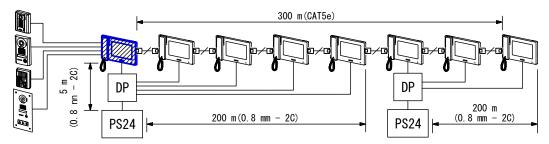

The following chart indicates how many units can be powered by a single power supply.

Combination of units	Master station	Sub master station	Long distance adaptor
Master and sub master stations	1	4	-
Master and sub master stations with long distance adaptors	1	3	4
Sub master stations only	-	6	-


2. Supplying power to sub master stations via wiring with the master station

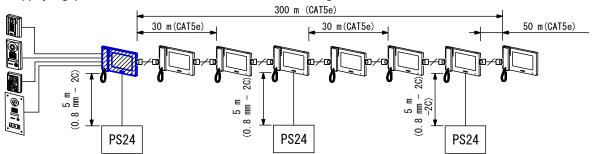

The following chart indicates how many units can be powered by a single power supply.


Combination of units	Master station	Sub master station	Long distance adaptor
Master and sub master stations	1	2	-
Master and sub master stations with long distance adaptors	1	2	4
Sub master stations only	-	3	-

3. Connecting a power supply to the master and each sub master station individually

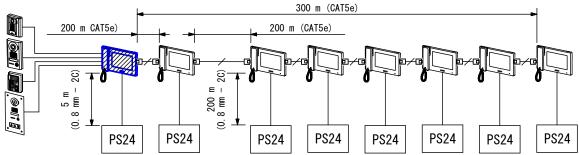


DESCRIPTION	FIG. NAME		UNIT	DATE
MASTER STATION	SELECTING POWER SUPPL	Y METHOD	mm	6 October, 2014
MODEL NO.	FIG. NO.	PAGE	REVISION	AIRHANE
JP-4MED	59615-3-7	3/7	1	AIPHONE

4. Supplying power to sub master stations via a distribution adaptor

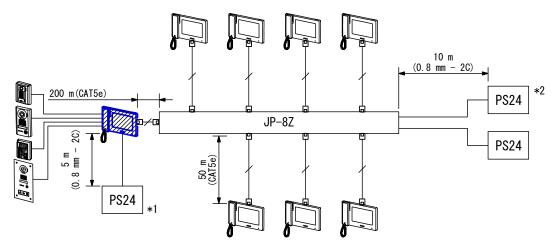

- *1: The master station needs a power supply.
 *2: Up to four sub master stations can be supplied with one power supply.
 Use two power supplies for 5 7 sub master stations.

5. Mix-and-match methods

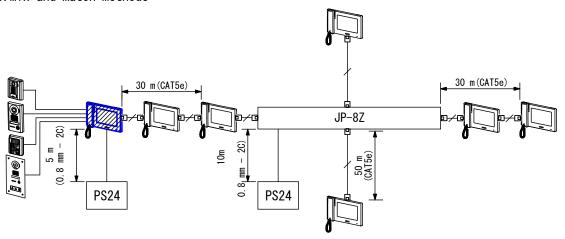


PS24 : 24V DC, PS-2420 power supply

DP: Distribution point

PE: Polyethylene-insulated PVC-coated cable

DESCRIPTION	FIG. NAME		UNIT	DATE
MASTER STATION	WIRING DIAGRAM		mm	6 October, 2014
MODEL NO.	FIG. NO.	PAGE	REVISION	
JP-4MED	59615-4-7	4/7	1	AIPHONE

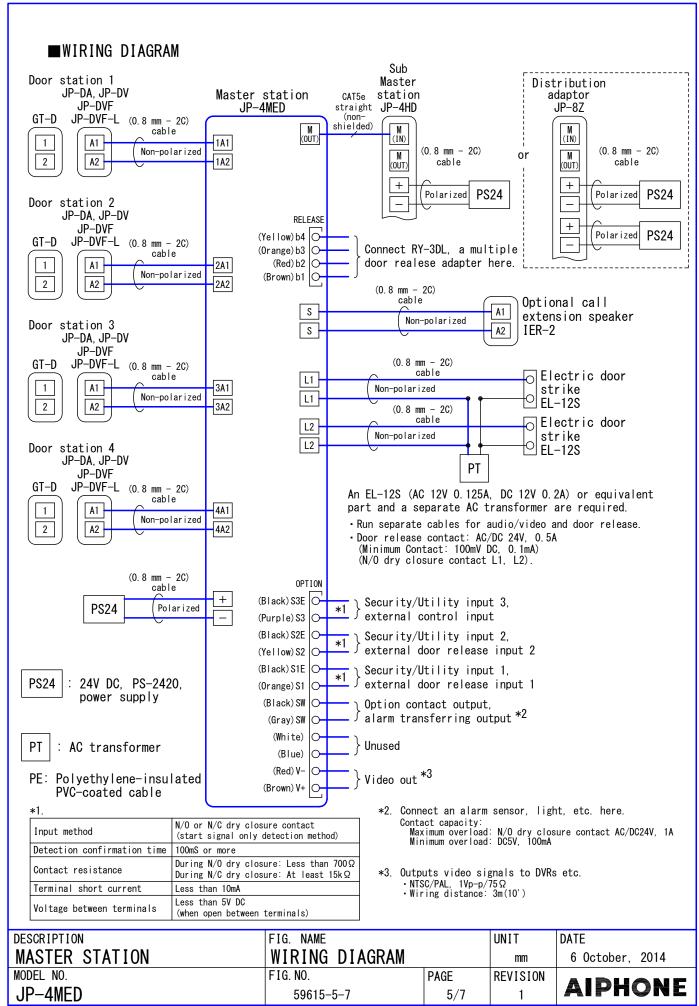

■ RESTRICTIONS

- Due to hands-free auto-voice actuation system, smooth voice switching may be hindered by voice strength of the opponent or ambient noise, etc.
- One Call extension can be connected. However instant voice call of door station is not available from Call extension.
- The adjusting with call tone volume on the Master station does not vary the volume from Call extension.
- 7 Sub station, JP-4HD can be connected.

■RESTRICTIONS ON WIRING

- For wiring, it is recommended to use a single vinyl jacketed cable with PE(polyethylene) insulation. The following cables can not be used;
 - Coaxial cable
 - Individual conductors
 - Twisted pair cable
 - Cable with conductors in odd number
- PARALLEL CABLE





• Keep the intercom wires more than 30 cm away from AC power lines.
(It causes noise in communication and malfunction) When using the existing cable run, the system may not work properly by type. In that case, it becomes necessary to install a new cable.

■FUNCTIONS

- Calling door station, call stand-by approx. 45 or 90 sec./Communication, approx. 1 minute/ 3 minutes for handset/Ending communication by pressing OFF button.
- Communication status is steadily lit while speaking./during hands-free operation.
- Backlight compensation by pressing ADJUST button while monitor is on.
 (Low light compensation at night. Distinguishing between day and night is automatically done by the door station)
- ZOOM & WIDE camera control by pressing ZOOM & WIDE button while monitor is on.
- PanTilt camera control on Z00M mode.
- Pre-setting of PanTilt position for ZOOM mode.
- Instant voice call-in with image (approx. 45 sec.)
- Room-to-room communication by pressing CALL button, communication approx. 10 min.
- External sensor input: When external sensor activates, monitor stations are notified notification sounds (When the outdoor output is set, JP-4MED and door station sound at a volume equivalent to "10 (Hight)."
- Security function
- Activating door strike.
- Option button: Controls external device such as entrance light

<Picture memory>

- Records call from video door station automatically (First shot is recorded after 2 seconds.) (Total of 1 shot per sec. on the internal memory.) (Total of 4 shots per sec. on the SD card)/The REC mark is shown.
- Press REC button to record manually/The REC mark is shown.
- Max. 20 pictures can be recorded on the internal memory (automatic and manual recording),
 (Up to 1000 can be stored on the SD card (depending on the SD card capacity))
- Protect max. 5 pictures on the internal memory,
 Up to 100 can be protected depending on the SD card.

DESCRIPTION	FIG. NAME		UNIT	DATE
MASTER STATION	RESTRICTIONS/FU	JNCTIONS	mm	6 October, 2014
MODEL NO.	FIG. NO.	PAGE	REVISION	AIBHANE
JP-4MED	59615-6-7	6/7	1	AIPHONE

■ SETTING

• Settings after the installation

• .	0.1.1.			
Item	Sub item	Setting range		
SECURITY SENSOR INPUTS	(Usage of the inputs	DISABLE/UTILITY/SECURITY/		
	1 - 3)	REQUEST TO EXIT (Inputs 1 and 2 only)/		
		EXT. TALK INPUT (Inputs 3 only)/		
	(Detection method for the inputs 1 - 3)	N/O, N/C		
OPTION OUTPUT	EVENT ACTIVATION	DISABLE/ENABLE		
	DURATION	MOMENTARY, 1, 3, 5, 10, 15, 20, 25, 30, 60sec.		
	TRIGGER EVENT	DOOR CALL/ROOM CALL/ALARM ON/VIDEO OUT		
SET DOOR RELEASE	LOCK1/ OUTPUT METHOD	N/O, N/C		
	LOCK2 REFERENCE DOOR (for DOOR1 - 4)	SHOW/HIDE		
	DOOR RELEASE DURATION	MOMENTARY, 1, 3, 5, 10, 15, 20, 25, 30, 60sec.		
INITIALIZE	_	YES/NO		
SOFTWARE VERSION	_	_		

• User setting

	Category	Item	Sub item	Setting range
CAL			D00R1/D00R2/D00R3/D00R4	ENABLE/DISABLE
		ROOM STATION CALL	ID2/ID3/ID4/ID5/ID6/ID7/ID8	ENABLE/DISABLE
		SETTINGS *		
		CALL TONE	D00R1/D00R2/D00R3/D00R4/	1 - 8
			INTERNAL ROOM CALL	
		DOOR CALL DURATION	_	45sec. /90sec.
TAL	.K	PRIVACY MODE	_	ENABLE/DISABLE
		AUTO NIGHT VOLUME	_	ENABLE/DISABLE
		VIDEO DOOR LED	-	ENABLE/DISABLE
MON	IITOR	ROOM MONITOR	_	ENABLE/DISABLE
		VIDEO DOOR LED	_	ENABLE/DISABLE
		DOOR MONITOR DURATION	-	30sec. /60sec. /120sec. /CONTINUOUS
		ROOM MONITOR DURATION	_	10min./CONTINOUS
Ī	SOUND SETTING	AUDIBLE TOUCH TONE	_	ENABLE/DISABLE
		VOICE GUIDANCE	D00R 1	ENABLE/DISABLE
		(JP-DVF-L only)	DOOR 2	
			D00R 3	
			D00R 4	
	DOOR RELEASE *	_	D00R1/D00R2/D00R3/D00R4	ENABLE/DISABLE
	PIN SETTING	_	CURRENT PIN/NEW PIN	(Select four numbers from 0 - 9)
	DATE/TIME	_	(MONTH/DAY/YEAR/HOUR/MINUTE)	_
	ALARM SETTING SECURITY SETTING		EXIT DELAY SETTING	0/30sec. /60sec. /120sec. /300sec.
				/600sec.
٩L			RETURN DELAY SETTING	0/30sec. /60sec. /120sec. /300sec.
3ENERAL				/600sec.
Œ			ALARM PIN	ENABLE (Select four numbers from
				0 - 9)/DISABLE
		UTILITY SETTING	ALARM AT DOOR	ENABLE/DISABLE
			ALARM DURATION	10sec./1min./10min./1hr.
	SD CARD	EXPORT RECORDED	_	YES/NO
		IMAGES		
		FORMAT SD CARD	-	YES/NO
	ROOM STATION NAME	-	ID1 - ID8	-
	LANGUAGE	-	-	ENGLISH/FRANCAIS/DEUTSCH/
				NEDERLANDS/ESPANOL/ITALIANO/
		.1.		NORSKE/繁體中文/中文(簡体)
ADυ	IUST	☆	-	1 - 10
		VOLUME	U))/®/₽/₽	0 (mute), 1 - 10
REC	CORD	SELECT RECORD SETTINGS	-	ZOOM > WIDE
				WIDE > ZOOM
				Z00M
				WIDE
		ERASE ALL RECORDED	-	YES/NO
		IMAGES		

f * . It is required to enter PIN before making this setting.

DESCRIPTION	FIG. NAME		UNIT	DATE
MASTER STATION	SETTING		mm	6 October, 2014
MODEL NO.	FIG. NO.	PAGE	REVISION	AIRHAND
JP-4MED	59615-7-7	7/7	1	AIPHONE