



- *1: When installing two Residential/tenant stations within a Residence, extend 2 wires from the Bus trunk line.

 And have the same number programmed at each Entrance station and Guard station. (No communication between the Residential/tenant stations)
- *2: One Doorbell only allowed for either Residential/tenant station (not both).
- PE: Polyethylene-insulated PVC jacket cable

■ RESTRICTIONS

• Max. distance of 300m(980') from the Bus control unit (GT-BC) to the farthest Residential/tenant station.

■FUNCTIONS

- Receiving a call and communication with Entrance station.
 - Activating door release with Door release button.
- Light control available when receiving a call from Entrance station.
- Calling and communication with Guard station, both ways.
- Receiving Emergency alarm. (Emergency call tone sounds and transfer is made to Guard station.)
- Alarm sound and transfer to Guard station triggered by broken wire.
- Receiving a tone call from Doorbell at the door.
- Setting for a doctor call; Cut off a jumper(JP4) on the PC card inside of GT-1D. Press Security guard CALL/Light button on GT-1D to be set. Call tone off indicator blinks for 0.5 sec. every 2.5 sec.

User-optional feature using SERVICE button, such as turning on/off light, elevator control, etc.

■SETTING

 Adjusting call tone volume (OFF - LOW - HIGH) with Call tone volume control (When the switch is put to OFF position, the tone-off blinker notifies.)

DESCRIPTION	(Handset)	FIG. NAME		UNIT	DATE
RESIDENTIAL/TENANT	STATION	WIRING/RESTRIC./FUNC	./SETTING	mm	11 July, 2017
MODEL NO.		FIG. NO.	PAGE	REVISION	AIRHANE
GT-1D		G57653-2-2	2/2	2	AIPHONE