 



■ RESTRICTIONS

- A PoE-compatible switch must be used as the switch (hub) for station connection.
- Video door station's ONVIF video system can only be accessed by one 3rd party product at a time. Multiple simultaneous connections not possible.
- A computer is required to make system settings.


 IX system can be configured in one of the two methods, "IX Support Tool" application or
 Web browser. Once the system has been configured through a browser, the settings cannot be
 transferred to IX Support Tool. The IX Support Tool is recommended for system settings
 management.
- Do not cover the moisture escape holes with caulking seals.
- While updating the System settings, stations unavailable.
- Avoid installing This station in the following locations;



 At the entrance where background is sky in upper floors of Condominiums, etc.



 The background of the standing caller's is white wall.



Where the standing location is strongly sunlit.

• In order to audio or video record, the following microSD memory card (market goods) compliant with SD standard is necessary.

Standard	Capacity	File System	Speed Classes
SDHC	4GB up to 32GB	FAT32	C10

■ RESTRICTIONS ABOUT THE NETWORK

- When connecting via the Internet (global IP networks), VPN Service is necessary.
- We do not recommend using a wireless communication such as wireless LAN as it may not operate correctly due to security issues or communication speed delays.
- For IPv4 Address with DHCP, due to the architecture of the IX system, DHCP configuration is only recommended for network environments utilizing managed (static) IP address leasing.
- For stateless IPv6 Address, do not change the prefix of the device so that it cannot transmit Router Advertisement (RA)
- For IPv6 Address with DHCP, due to the architecture of the IX system, DHCP configuration is only recommended for network environments utilizing managed (static) IP address leasing. The DUID of the device: 00030001 + MAC address
- Depending on the network environment and computer, prior arrangements and setup operations involving the network administrator might be necessary.
- Depending on the network environment, operation delay might occur.
- Depending on the network environment or other factors, audio or video dropout, delays, lower frame rates, or other loss of correct operation might occur.
- The protocols used by this system must be supported.
- The network bandwidth required by each device when communicating are as follows.

G. 711 • G. 722 : 64kbps x 2(in communication), 64kbps x stations(on page)

- H. 264: 64kbps up to 2048kbps (When communicating with 3rd party product supporting ONVIF, 32kbps to 8192kbps)
- IPv4 and IPv6 cannot be mixed in the same system.
- When using multicasting for video, or audio, use in an environment that does not reject IGMPv3 or MLDv2.

DESCRIPTION	FIG. NAME		UNIT	DATE
VIDEO DOOR STATION	RESTRICTIONS		mm	19 December, 2018
MODEL NO.	FIG. NO.	PAGE	REVISION	AIBHANE
IX-DVF-RA	154058-3-5	3/5	1	AIPHONE

■ FUNCTIONS

• Calling Group Call: Make an outgoing call to all stations that belong to the selected group. Contact input call: Make an outgoing call to all stations that belong to the selected Contact input

call group.

• Audio or video recording function
Audio or video recording: Record audio and video to a microSD card at the start of or during a call.
Audio or video playback: Play an audio or video recording saved to a microSD card on a computer.

Paging

Incoming a page. Option input The following functions can be assigned to each of the six option inputs.

Calling: Group Call

Answer operation: Answer a call and page by option input. Relay Latch Reset: Reset the "Latch Output" in operation. API: Send API command by option input.

 Relay Output
 The following functions can be assigned to each of the two relay outputs.

 Status output: Make a relay output in status of Outgoing a call/Communication.
 External Audio Output: Trigger a relay output for operating PA amplifier when audio output from Audio Output terminal.

Door Release: Trigger a relay output when receiving an unlocking instruction.

Option Relay Control: Trigger a relay output when receiving making an relay output instruction from another station.

Audio output

Output receiving audio of communication or paging to paging amplifier.

0thers

IP-PBX integration: IX System can integrate with IP-PBX *.

Make, receive, transfer calls, answer visitors, and release doors.

* Integration with SIP (Unified Communication Manager) of Cisco Systems.

Send emails: Emails can be sent to pre-registered email addresses when triggering events occur.

Transmitting video through ONVIF: View Video from Door Station camera with a 3rd party product supporting the ONVIF specification.

Chime: Play message data following a preset schedule

Chime: Play message data following a preset schedule.

Indicators


Name	Status *1	Description		
	Orange flashing	Booting		
		Device error, startup error		
		Communication failure		
		Updating Firmware		
		Mounting/unmounting microSD card		
Status indicator		Initializing		
ocacus muroacor	Blue light	Standby		
	Blue flashing	Call destination busy		
		Incoming call		
		Incoming paging		
		When being monitored (Depends on setting)		
Call indicator	Green flashing	Outgoing calling		
Communication indicator	Orange light	In communication		
Door release indicator	Green flashing	Door releasing *2		


The flashing pattern varies depending on the state of video door station.


This flashes when the electrical lock connected to this station is released.

If the door release timeout is set to 3 seconds or less, it will flash at a 3 second interval.


■ IMAGING RANGE AND MOUNTING LOCATION

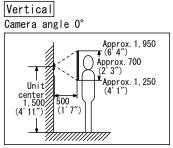

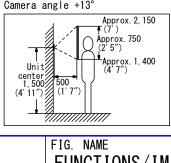

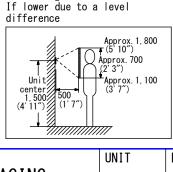

Camera angle -8°

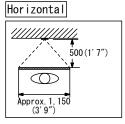

DESCRIPTION	FIG. NAME		UNIT	DATE
VIDEO DOOR STATION	FUNCTIONS/IMAGIN	IG	mm	19 December, 2018
MODEL NO.	FIG. NO.	PAGE	REVISION	AIBHANE
IX-DVF-RA	I 54058-4-5	4/5	1	AIPHONE

■ SETTING

- Station settings Configure on the station
- WEB settings Configure using a PC System requirements

Network	Ethernet (10BASE-T, 100BASE-TX)
Web browser	Microsoft Edge / Internet Explorer 10.0, 11.0 / Mozilla Firefox 59, 60(TLS1.0, 1.1 or 1.2 enabled)

Using the "IX Support Tool" application
 Install the application on a PC and use to create the setting file for all stations.
 Refer to "■IX SUPPORT TOOL"

■ IX SUPPORT TOOL

• System requirements

os	Windows 7 Professional, Windows 7 Enterprise, Windows 7 Ultimate Windows 8, Windows 8 pro, Windows 8 Enterprise Windows 8.1, Windows 8.1 pro, Windows 8.1 Enterprise Windows 10 Home, Windows 10 pro, Windows 10 Enterprise Windows 10 Education
CPU	32 bit (x86) processor or 64 bit (x64) processor of 1 GHz or higher
Memory	4 GB RAM or higher
Screen resolution	1280x768 or greater

• Functions

- Settings (Table View) ··· All stations in the system can be configured from the Settings window.
- Settings (Station View) ... Configure each station in the system individually.
- Setting File Download···Store the Settings File
- Setting File Upload...Upload the Settings File
- Station Search...Search the stations in IX System connected in the network to show the list.
- Station Replacement...this feature to replace a station.
- Restore System Settings...If the setting file is lost, the setting file can be restored.
- Update Firmware...Update the firmware for the station.
- Restrictions
 - If the station was configured or modified using the web interface, the setting file cannot be downloaded using the IX Support Tool.

■ IX SUPERVISION TOOL

Install the application on a PC and use to Line supervision and device check for stations.

System requirements

0S	Windows 7 Professional, Windows 7 Enterprise, Windows 7 Ultimate Windows 8, Windows 8 pro, Windows 8 Enterprise Windows 8.1, Windows 8.1 pro, Windows 8.1 Enterprise Windows 10 Home, Windows 10 pro, Windows 10 Enterprise Windows 10 Education
CPU	32 bit (x86) processor or 64 bit (x64) processor of 1 GHz or higher
Memory	4 GB RAM or higher
Screen resolution	1280x768 or greater

• Functions

- Line Supervision...By checking the response to a ping, this feature confirms that the station is properly connected to the network.
- Device Check...This function to determine whether stations are operating normally or malfunctioning.
- Download Video and Audio...To download recordings of the Door Stations.

DESCRIPTION	FIG. NAME		UNIT	DATE
VIDEO DOOR STATION	SETTING/IX SUPPORT TOOL/IX SUI	SETTING/IX SUPPORT TOOL/IX SUPERVISION TOOL		19 December, 2018
MODEL NO.	FIG. NO.	PAGE	REVISION	AIBHANE
IX-DVF-RA	154058-5-5	5/5	1	AIPHONE