


# IX Series 2

## Door to Door Communication

### GENERAL OVERVIEW:

Two-way, door station-to-door station or sub station-to-sub station communication is possible without the use of a master station. However, the ability to trigger door release is unavailable with this configuration.

### Configuring the Call Button

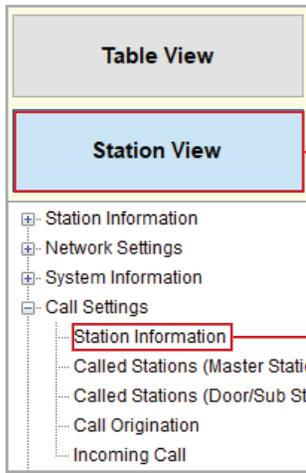


#### 1.1 - Station View

Switch from **Table View** to **Station View** by clicking the Station View button in the top left-hand of Support Tool.


#### 1.2 - Station Information

Expand **Call Settings** and click **Station Information**.

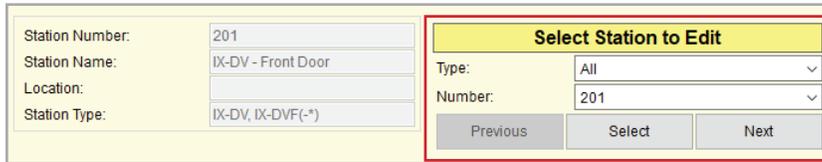

#### 1.3 - Select a Station

Use the drop-down menu to choose the station number of the door station and click **Select**.

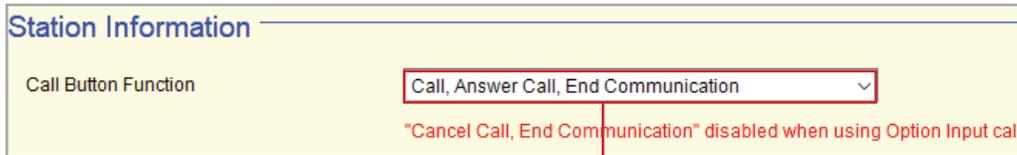


#### 1.4 - Call Button Function

Under **Station Information**, use the drop-down menu for **Call Button Function** and select **Call, Answer Call, End Communication**. This will allow this station to use its call button to place outgoing calls, and answer/end incoming calls.




#### 1.5 - Update


Click the Update button in the top right corner to save changes.

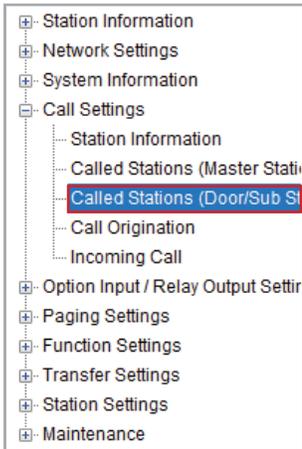


**1.6 - Called Stations**  
Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

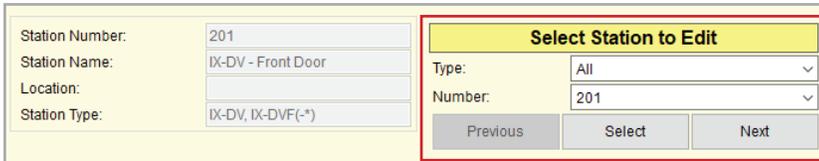

**1.7 - Select a Station**  
Use the drop-down menu to choose the station number of the door station to be configured and click **Select**.

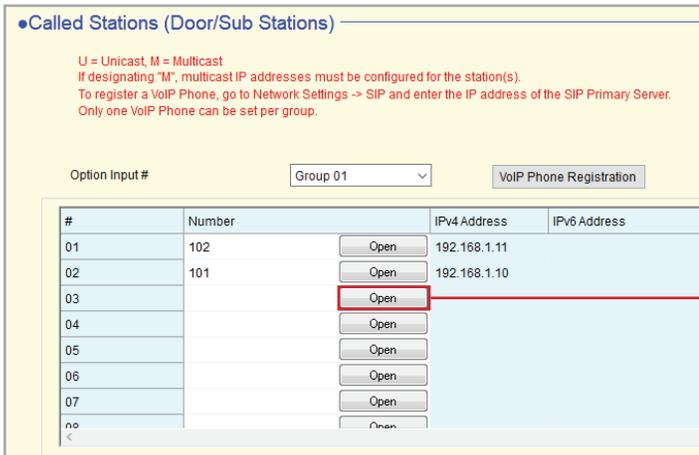


**1.8 - Open Station List**  
Under **Called Station (Door/Sub Stations)**, click the **Open** button of the first available row.

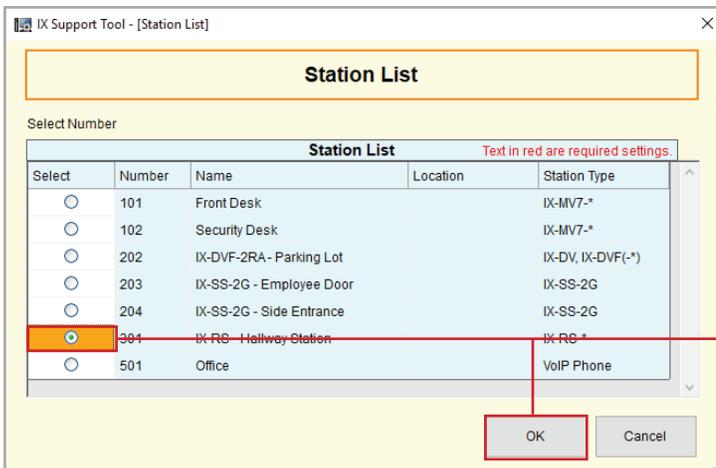


**1.9 - Add a Station**  
**Select** the radio button of a station to add to the called stations list and click **OK**.

## Uploading Settings to Stations

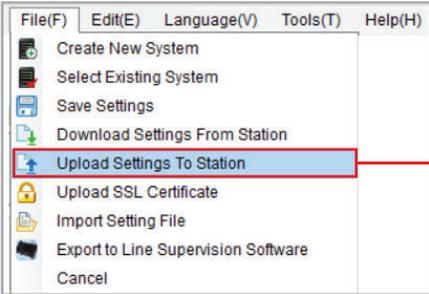

**2.1 - Upload Settings to Station**  
From the menu bar, select **File** then **Upload Settings to Station**.

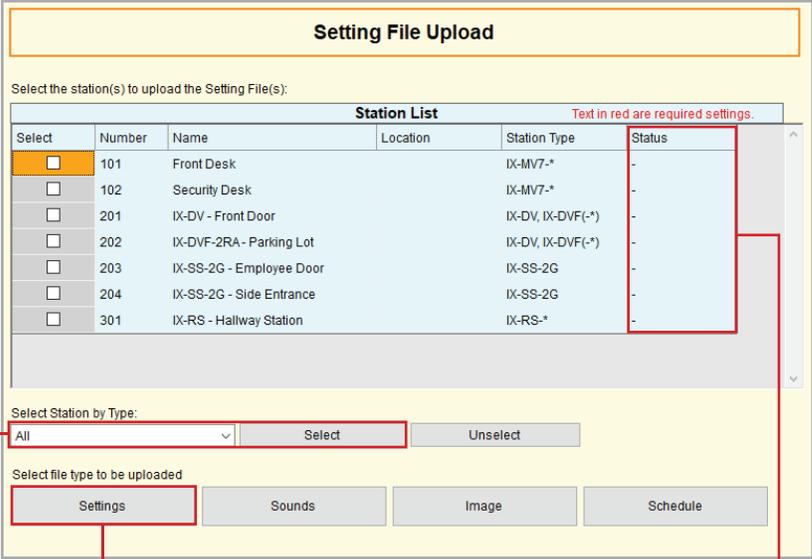

**2.2 - Select Stations**  
Click **Select** to check all stations in the system.

**2.3 - Upload Settings**  
Click **Settings** to begin the upload process.

**2.4 - Confirm Status**  
Using the **Status** column confirm, that each station has received its setting file.