

IX Series 2

IX-RS Sub Master Door Release Settings

GENERAL OVERVIEW:

The IX-RS audio only sub station can be configured to receive incoming calls from door stations and trigger door release. These settings add features to the station while still maintaining its primary functionalities.

Calling the IX-RS

1.1 - Station View
Switch from **Table View** to **Station View** by clicking the Station View button in the top left corner of Support Tool.

1.2 - Called Stations
Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

1.3 - Select a Station
Use the drop-down menu to choose the station number of the door station to call the IX-RS and click **Select**.

U = Unicast, M = Multicast
If designating "M", multicast IP addresses must be configured for the station(s).
To register a VoIP Phone, go to Network Settings -> SIP and enter the IP address of the SIP Primary Server.
Only one VoIP Phone can be set per group.

Option Input #

#	Number	IPV4 Address	IPV6 Address
01	102	192.168.1.11	
02	101	192.168.1.10	
03			
04			
05			
06			
07			
08			
<			

1.4 - Open Station List
Under **Called Station (Door/Sub Stations)**, click the **Open** button of the first available row.

Calling the IX-RS (cont.)

Select	Number	Name	Location	Station Type
<input type="radio"/>	101	Front Desk		IX-MV7-*
<input type="radio"/>	102	Security Desk		IX-MV7-*
<input type="radio"/>	202	IX-DVF-2RA - Parking Lot		IX-DV, IX-DVF(-*)
<input type="radio"/>	203	IX-SS-2G - Employee Door		IX-SS-2G
<input type="radio"/>	204	IX-SS-2G - Side Entrance		IX-SS-2G
<input checked="" type="radio"/>	301	IX-RS - Hallway Station		IX-RS-*
<input type="radio"/>	501	Office		VoIP Phone

1.5 - Add an IX-RS
 Select the radio button of a station to add to the called stations list and click **OK**.



1.6 - Update
 Click the Update button in the top right corner to save changes.

Configuring hands-free answering to an IX-RS (Optional)


2.1 - Select a Station
 Use the drop-down menu to choose the station number of the IX-RS station to be configured and click **Select**.

2.2 - Call Button Function
Station Information use the drop-down menu for **Call Button Function** and select **Call, Answer Call, End Communication**.




2.3 - Update
 Click the Update button in the top right corner to save changes.

Enabling Door Release

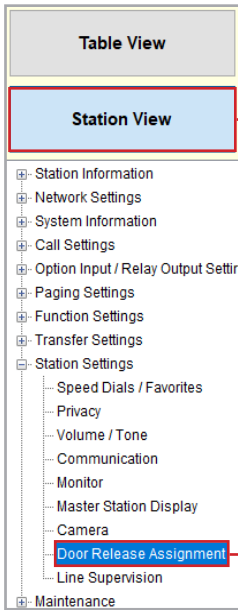

3.1 - Station View
Switch from **Table View** to **Station View** by clicking the Station View button in the top left corner of Support Tool.

3.2 - Called Stations
Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

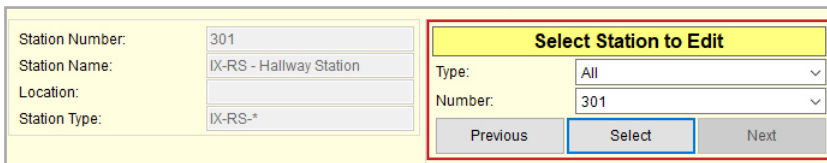

3.3 - Select a Station
Use the drop-down menu to choose the station number of the IX-RS station to be configured and click **Select**.




3.4 - Door Release
Scroll down to **Door Release by IX-RS**, and Select **Enable** to allow door release for the IX-RS.




3.5 - Update
Click the Update button in the top right corner to save changes.

Uploading Settings to Stations

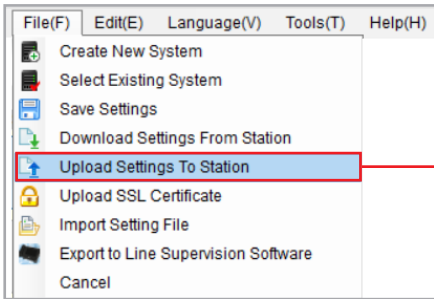

4.1 - Upload Settings to Station
 From the menu bar, select **File** then **Upload Settings to Station**.

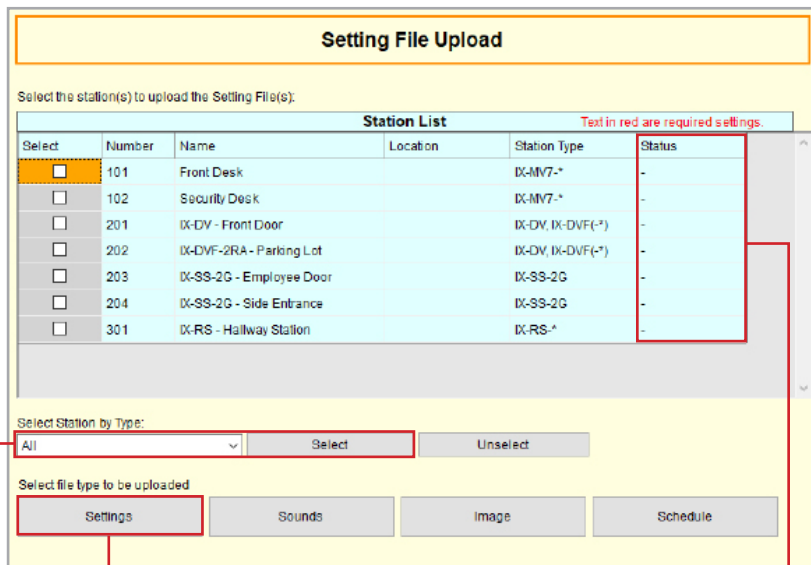

4.2 - Select Stations
 Click **Select** to check all stations in the system.

4.3 - Upload Settings
 Click **Settings** to begin the upload process.

4.4 - Confirm Status
 Using the **Status** column confirm, that each station has received its setting file.