Notes:	

## Clarson Apparatebau GmbH Zeppelinstr. 4 78083 Dauchingen

Zeppelinstr. 4 78083 Dauchingen Postfach 11 63 78080 Dauchingen

Tel.: +49 7720 9956-0 Fax: +49 7720 9956-22 Email: clarson@clarson.de Internet: http://www.clarson.de





**PUBLIC III** 

Headset, wired

Operating and Installation Instructions








## **Installation of Components**

- ① Link the microphone loudspeaker unit 40.054.301 (jack 2) with the central unit 40.054.311 (HEADSET jack) via patch cable.
- $oldsymbol{\mathbb{Q}}$  Connect the headset to **jack**  $oldsymbol{\mathbb{Q}}$  of the microphone loudspeaker unit.

# Headset, monaural Ref. 40.030.011

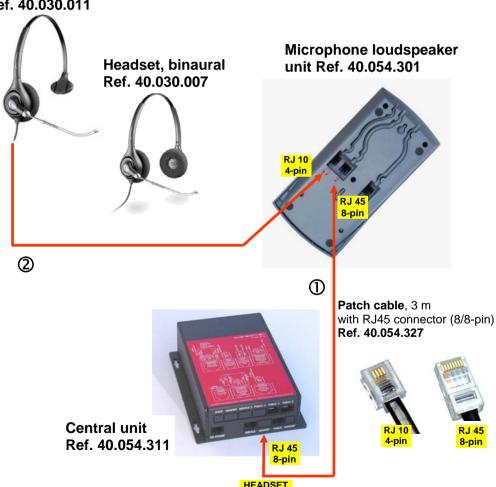

jack

### **Activation / Deactivation of HEADSET Interface**

#### Service Side



#### Activate headset mode:

- Switch the system OFF (button ①)
- Push and hold 4+ until LED above the button flashes once
- Switch the system ON (button ①)
- · Headset mode is now activated
- Microphone and loudspeaker service side are deactivated
- LED above button ⊕ flashes (0,5 sec on - 0,5 sec off) indicating headset mode

#### Deactivate headset mode/ Back to standard mode:

- Switch the system OFF (button ①)
- Push and hold 4+ until LED above the button flashes once
- Switch the system ON (button ①)
- System again in standard mode

or

Briefly disconnect the unit from the power supply

#### **Public Side**



#### Activate headset mode:

- Switch the system OFF (button ①)
- Push and hold ¶+ until LED above the button flashes *twice*
- Switch the system ON (button ①)
- Headset mode is now activated
- Microphone and loudspeaker on public side are deactivated
- LED above button ⊕ flashes (1 sec an - 0,2 sec aus) indicating headset mode

## Deactivate headset mode / Back to standard mode:

- Switch the system OFF (button ①)
- Push and hold ⁴+ until LED above the button flashes <u>twice</u>
- Switch the system ON (button ①)
- System again in standard mode

or

Briefly disconnect the unit from the power supply