


SPECIFICATIONS

Power source	18V DC, S	supplied from a power sup	ply				
Power consumption	420mA(max.) 38mA(standby.)						
Video monitor	7" TFT color LCD						
Pixels	300,000 pixels (approx.)						
Type of communication	Open voice hands-free auto-voice actuation or Press-to-talk communication						
Ambient temperature	0~40						
Video door station	1 unit						
Expansion monitor station	1 unit						
Call extension	1 unit						
Call tone	1 fixed call tone only						
Door release contact	24V AC/DC, 0.5A (N/O dry closure contact)						
Option button output	24V AC/DC, 0.5A (N/O dry closure contact)						
Mounting	Surface wall mount						
Electrical box	3-gang box						
Material	Unit case: Fire-retardant ABS resin						
	Surface panel: Polycarbonate						
Weight	Approx.480g						
Unit color	Pure white (N9.5 Munsell Approximation)						
DESCRIPTION		FIG. NAME		UNIT	DATE		
EXPANSION MONITOR STATION		SPECIFICATIONS		mm	10 June, 2013		
MODEL NO.		FIG.NO.	PAGE	REVISION	AIBUANE		
JO-1FD		59251-2-4	2/4	1	AIPHONE		

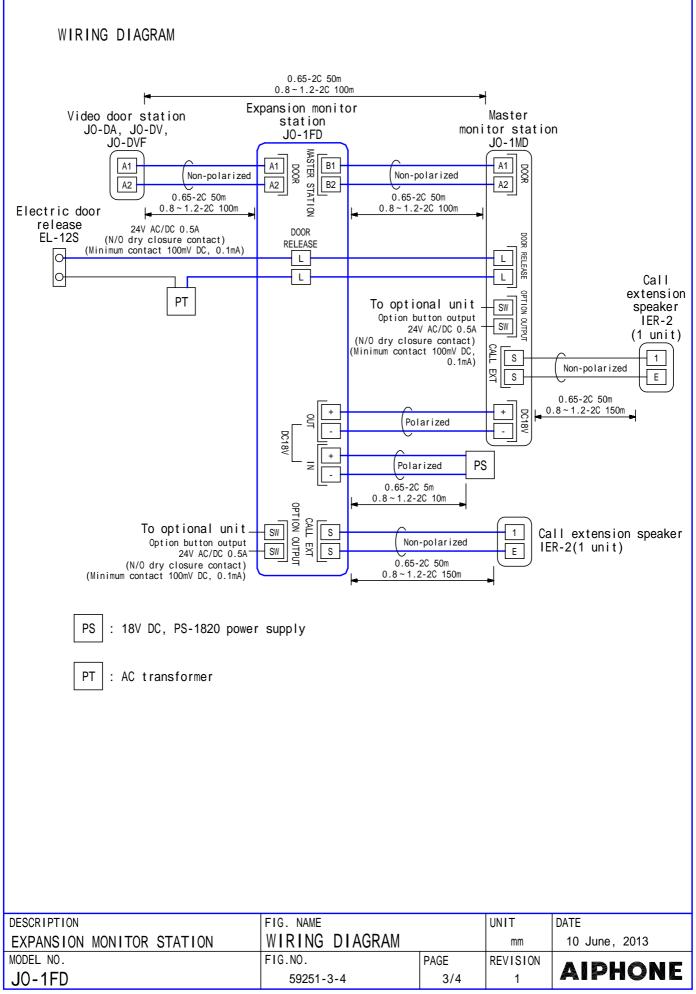

RESTRICTIONS ON OPERATING

Due to hands-free auto-voice actuation system, smooth voice switching may be hindered by voice strength of the opponent or ambient noise, etc. One Call extension speaker can be connected. The adjusting with call tone volume on the Master monitor station does not vary the volume from Call extension speaker. Room-to-room communication is not available. Instant voice call in of door station is not available. When the power supply is turned off, power failure, or the RESET button is pressed, the setting of brightness, communication volume, and call tone volume are returned

RESTRICTIONS ON WIRING

to the default setting.

For wiring, it is recommended to use a single PVC jacketed cable with PE(polyethylene) insulation. The following cables can not be used;

Coaxial cable

Individual conductors

Twisted pair cable







Cable with conductors in odd number

Keep the intercom wires more than 30cm away from AC power lines.

(It causes noise in communication and malfunction) When using the existing cable run, the system may not work properly by type. In that case, it becomes necessary to install a new cable.

A1 and A2 between the Expansion monitor and Master monitor stations and the +,- power line cables can all be wired with the same sheath.

Other wiring must be separated by at least 10cm from A1, A2 and the power cables.

FUNCTIONS

Calling door station, call stand-by approx. 45 sec./Communication, approx. 1 min. timed/ Ending communication by pressing Talk/off button.

Monitoring audio/video of door station, approx. 1 min. timed.

Press-to-talk communication, after pressing Talk/off button approx. 2 sec. or more Activating door strike.

When a short is detected between A1 and A2 of the door station, the unit stops functioning and the Status LED flashes rapidly until the short is removed.

Option button: Controls external device such as entrance light.

SETTING

*. Default setting

DESCRIPTION	FIG. NAME		UNIT	DATE
EXPANSION MONITOR STATION	RESTR./FCN./SETTING		mm	10 June, 2013
MODEL NO.	FIG.NO.	PAGE	REVISION	
JO-1FD	59251-4-4	4/4	1	AIPHONE