



## NAMES & FUNCTIONS

### DA-1MD

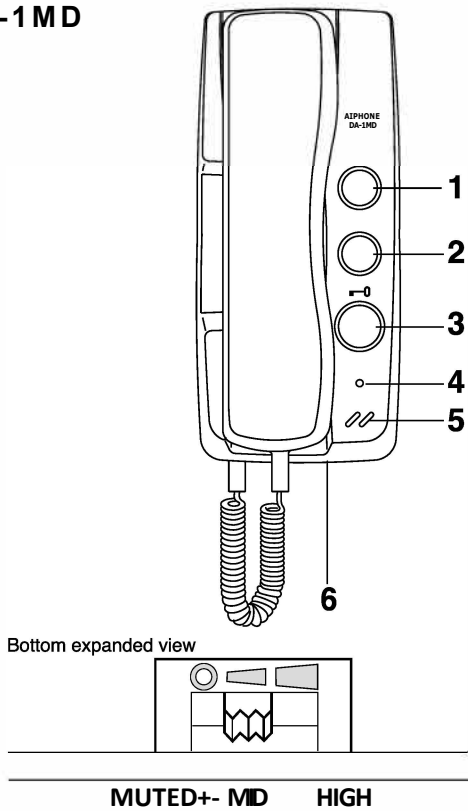

- 1 Unused
- 2 SERVICE button (option)
- 3 **DOOR RELEASE** button
- 4 Call tone off LED  
Stays lit when the volume control is in MUTED position.
- 5 Call tone sounder
- 6 Call tone volume control

## OPERATIONS

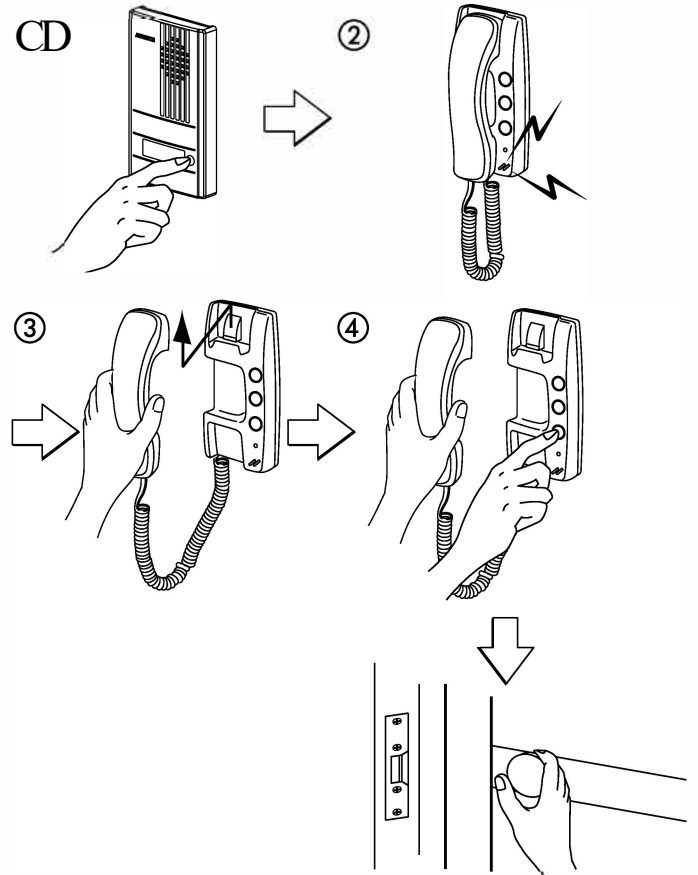

- G) Depress and hold down to call
- Q) Call tone rings
- @ Lift handset and communicate
- @ Depress and hold down to activate door release

## TECHNICAL PRECAUTIONS

### Ambient temperature:

DA-1 MD: 0°C ~ +40°C

### Asking for repairs:

If your DA system does not operate properly, ask qualified technician to repair it.

### Cleaning:

Clean the unit with a soft cloth dampened with neutral household cleanser. Never use any abrasive cleaner or cloth.

## SPECIFICATIONS

### Power source:

AC 15V, supplied from power supply

### Dimensions & weight:

200H x 89W x 63D(mm). 350g .