
IX Series 2

Changing the Call Destination


GENERAL OVERVIEW:

The call destination of a door/sub station can be configured to change from one location to another by either a set time of day or by a schedule. A new group of master(s) will need to be created before the destination can be set.

Table of Contents

Page 2	Creating a Group <i>- Create a group of stations to change call destinations to</i>
Page 3	Change Destination by Time <i>- Change the call destination based on a period of time</i>
Page 4	Change Destination by Weekly Schedule <i>- Change the call destination by time and date</i>
Page 5	Change Destination by Daily Schedule <i>- Change the call destination by time on a specific day</i>
Page 6	Upload Settings to Station <i>- Upload the Settings and Schedule to the system</i>

Creating a Group

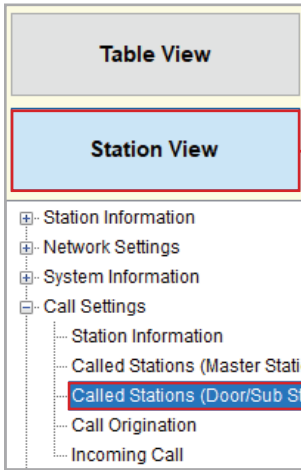


1.1 - Station View

Switch from **Table View** to **Station View** by clicking the Station View button in the top left corner of Support Tool.

1.2 - Called Stations

Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

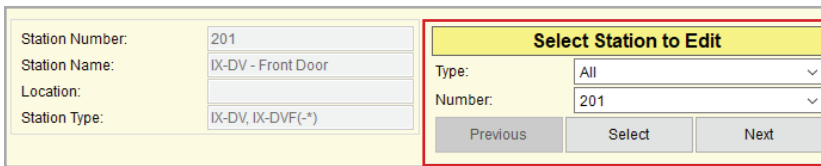

1.3 - Select a Station

Use the drop-down menu to choose the station number of the door station to be configured, click **Select**.

Called Stations (Door/Sub Stations)

U = Unicast, M = Multicast
 If designating "M", multicast IP addresses must be configured for the station(s).
 To register a VoIP Phone, go to Network Settings -> SIP and enter the IP address of the SIP Primary Server.
 Only one VoIP Phone can be set per group.



1.4 - Select a Group

Use the drop-down menu to choose a new **Group Number**.

1.5 - Adding Stations to Group

Click **Open** to view a list of all stations. Click the radio button next to a station and click **Ok** to add it to the list. Repeat for each station to be added to this group.

1.6 - Update

Click the Update button in the top right corner to save changes.

Note:

IX2 door/sub stations will call Group 01 by default. When creating the new group, ensure that the new group is any group other than 01.

Change Destination by Time Delay

- [-] Station Information
- [-] Network Settings
- [-] System Information
- [-] Call Settings
 - [-] Station Information
 - [-] Called Stations (Master Station)
 - [-] Called Stations (Door/Sub Stations)**
 - [-] Call Origination
 - [-] Incoming Call
- [-] Option Input / Relay Output Settings
- [-] Paging Settings
- [-] Function Settings
- [-] Transfer Settings
- [-] Station Settings
- [-] Maintenance

2.1 - Called Stations

Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

• Call Origination

Call Button / Option Input #:

Call Method

Standard Destination

Change Destination by Time Delay

Change Destination by Schedule

Ringback Tone ▲:

Call Timeout ▲▲: sec

Ringback Tone Count [time(s)] ▲:

Call Destination

Call Destination: Priority:

Standard Mode Settings

Call Destination: Priority:

Destination by Time Delay Settings

#	Call Destination	Priority
1	<input type="text" value="02"/>	<input type="text" value="Normal"/>
2	<input type="text"/>	<input type="text" value="Normal"/>
3	<input type="text"/>	<input type="text" value="Normal"/>
4	<input type="text"/>	<input type="text" value="Normal"/>
5	<input type="text"/>	<input type="text" value="Normal"/>
6	<input type="text"/>	<input type="text" value="Normal"/>
7	<input type="text"/>	<input type="text" value="Normal"/>
8	<input type="text"/>	<input type="text" value="Normal"/>

Destination Dwell Time [sec] ▲: 10-600 sec

2.2 - Call Method

Click the radio button next to **Change Destination by Time Delay**.

2.3 - Call Destination

Use the drop-down menu to choose a **Group Number** and **Priority**.

2.4 - Destination Dwell Time

Destination Dwell Time determines the amount of time spent calling each destination.



2.5 - Update

Click the Update Button

Note:

Settings will not take effect until the setting files have been uploaded to the stations. Refer to final page of this guide for the procedure of uploading the settings.

Change Destination by Weekly Schedule

- [-] Station Information
- [-] Network Settings
- [-] System Information
- [-] Call Settings
 - [-] Station Information
 - [-] Called Stations (Master Stati
 - Called Stations (Door/Sub S**
 - [-] Call Origination
 - [-] Incoming Call
- [-] Option Input / Relay Output Settir
- [-] Paging Settings
- [-] Function Settings
- [-] Transfer Settings
- [-] Station Settings
- [-] Maintenance

3.1 - Called Stations
Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

Call Origination

Call Button / Option Input #

Call Method

Standard Destination
 Change Destination by Time Delay
 Change Destination by Schedule

Ringback Tone

Call Timeout sec

Ringback Tone Count [time(s)]

3.2 - Call Method
Click the radio button next to **Change Destination by Schedule**.

Schedule Settings

The schedule is automatically sorted by Start Time after updating.
To upload Weekly Schedule , Daily Schedule to the station, upload schedule file using "Upload Settings To Station".

Weekly Schedule
(*Up to 12 schedules can be set per day.

#	Sun				Mon				Tue			
	Start Time	End Time	Call Destination	Priority	Start Time	End Time	Call Destination	Priority	Start Time	End Time	Call Destination	Priority
01	08 00	17 00	02	Normal	08 00	17 00	02	Normal	08 00	17 00	02	Normal
02												
03												
04												
05												
06												
07												
08												
09												

3.3 - Weekly Schedule
Set the **Start Time** and **End Time**, a **Call Destination** group, and a **Priority** by using the drop-down menu for each. Repeat for each day of the week.



3.4 - Update
Click the Update Button

Note:
Settings will not take effect until the setting files have been uploaded to the stations. Refer to final page of this guide for the procedure of uploading the settings.

Change Destination by Daily Schedule

- Station Information
- Network Settings
- System Information
- Call Settings
 - Station Information
 - Called Stations (Master Stati
 - Called Stations (Door/Sub S**
 - Call Origination
 - Incoming Call
- Option Input / Relay Output Setti
- Paging Settings
- Function Settings
- Transfer Settings
- Station Settings
- Maintenance

4.1 - Called Stations
Expand **Call Settings** and click **Called Stations (Door/Sub Stations)**.

3.3 - Weekly Schedule
Set the **Start Time** and **End Time**, a **Call Destination** group, and a **Priority** by using the drop-down menu for each. Repeat for each day of the week.

4.2 - Call Method
Click the radio button next to **Change Destination by Schedule**

4.3 - Daily Schedule
Select a day from the **Daily Schedule Calendar**.

4.4 - Setting the Schedule
To add a **Daily Schedule** select a **Start Time**, **End Time**, **Call Destination** and **Priority** using the drop-down menu. Click **Add** to add this to the daily schedule list.

Call Origination

Call Button / Option Input # Call Button

Call Method

Standard Destination

Change Destination by Time Delay

Change Destination by Schedule

Ringback Tone Call Pattern 1

Call Timeout 10-600 sec 60 sec

Ringback Tone Count [time(s)] Infinite

Daily Schedule

November 2018

Sun	Mon	Tue	Wed	Thu	Fri	Sat
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	1
2	3	4	5	6	7	8

Today: 11/14/2018

1/12 Registered


Start Time	End Time	Call Destination	Priority	
08 Hour 00 Minute	17 Hour 00 Minute	02	Normal	Add (*)Press *Add



4.5 - Update
Click the Update Button


Note: Settings will not take effect until the setting files have been uploaded to the stations. Refer to final page of this guide for the procedure of uploading the settings.

Uploading Settings to Stations

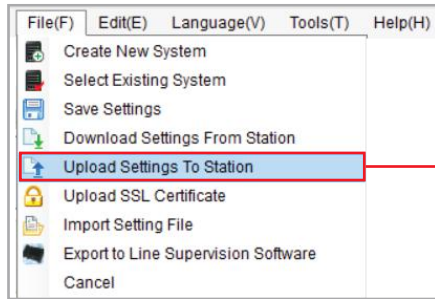

5.1 - Upload Settings to Station

From the menu bar, select **File** then **Upload Settings to Station**.

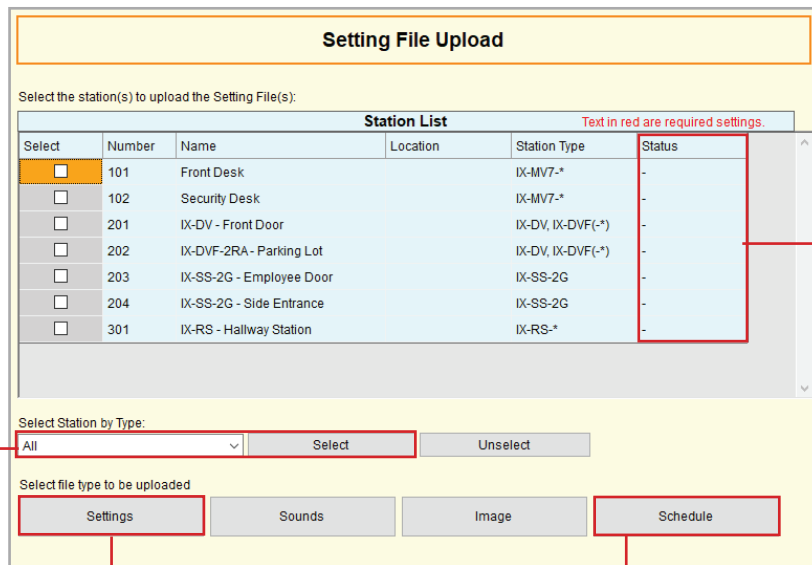

5.2 - Select Stations

Click **Select** to check all stations in the system.

5.3 - Upload Settings

Click **Settings** to begin the upload process.

5.4 - Upload Schedule

Click **Schedule** to begin the upload process.

5.5 - Confirm Status

Using the **Status** column confirm, that each station has received its setting file.